


NOTES:

- USE OF "LOW PROFILE" BASKET PACKAGE WILL ALLOW BASKET, BURLAP AND TWINE TO REMAIN INTACT THROUGH THE FIRST YEAR.
- REMOVE ALL BURLAP AND TWINE REMAINING OVER TOP OF ROOT BALL WITHIN ONE YEAR OF PLANTING.
- USE OF SYNTHETIC BURLAP AND TWINE IS PROHIBITED.
- IF ROOT BALL HAS BEEN REBURLAPPED, REMOVE BURLAP ON THE OUTSIDE OF BASKET AFTER ROOT BALL IS PLACED IN THE PLANTING PIT.
- DO NOT LIFT "PACKAGE" BY WIRE BASKET AS IT CAN CAUSE WIRE TO EXTEND ABOVE SHOULDER OF ROOT BALL.
- IF THE SIDES OF THE PLANTING PIT ARE GLAZED OR DRIED, USE A HAND TOOL TO BREAK UP THE SURFACE BEFORE PLANTING.

PLANTING PIT DIAMETER AT LEAST 2 TIMES ROOT BALL DIAMETER IN ALL DIRECTIONS. SIDES SHOULD SLOPE FROM SURFACE TO BOTTOM OF ROOT BALL.

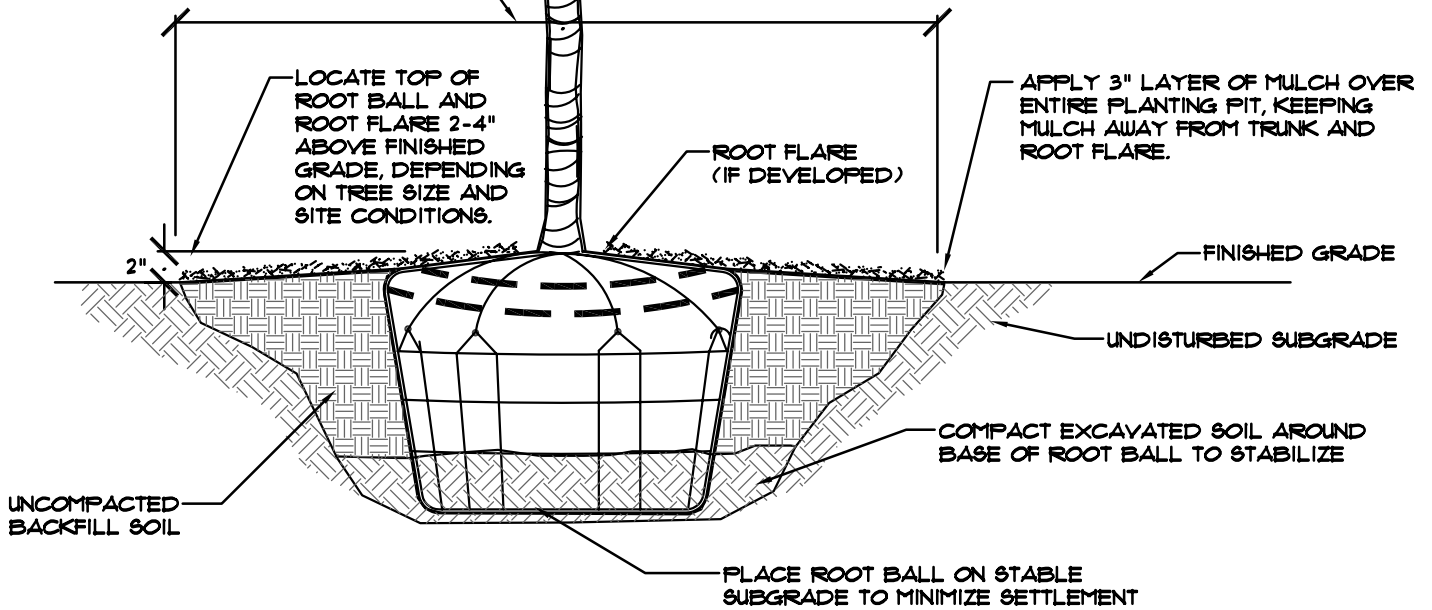

SHADE TREE PLANTING WITH LOW PROFILE PACKAGE